

REQUIRED ACTION

Immediately stop using the machine, disconnect the negative battery cable from the battery, and secure it away from the battery to prevent accidental contact with the negative battery terminal.

NEGATIVE BATTERY CABLE DISCONNECT PROCEDURE


NOTE

The following procedural photos may not reflect your actual machine. They are for reference only.

1. Confirm eligible engine model, engine specification, and engine serial number by matching them to "Eligible Engines Table".



2. Verify the ignition key is in the OFF position.
3. Locate the machine battery. See the machine's Owner Manual for location or contact your machine's dealer for more information.
4. Locate the negative battery post on the battery.

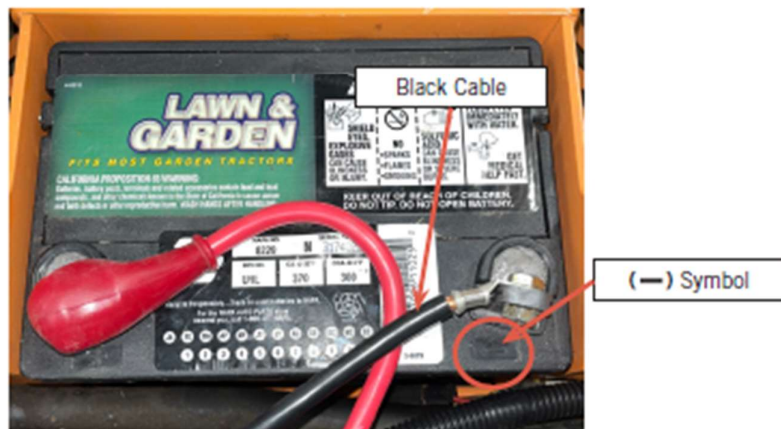

5. Using the appropriate tools, remove the retaining nut and bolt and keep for installation



6. Remove the negative battery cable and secure it in a location where it cannot accidentally contact the negative battery terminal.

- Install a Zip Tie or similar retaining hardware.

